

# RCLS-LS4208: Programming Barcodes for LS4208

Configuration name in Utility : RCLS-LS4208  
Version : 001  
Last Modified : 18-Mar-10  
Windows Filename : RCLS\_LS4208.scncfg  
Plug-in Name : LS4208-COMMON MODELS-S-013



7/8. Save Rule



## General Parameter Settings

8/8. Configuration File RCLS-LS4208



## Firmware:

NBRALAAI

## Supported Scanner Models for Plug-in :

LS4208-2356-4208-0000

LS4208-SR20001ZC

LS4208-SR20001ZCR

LS4208-SR20001ZZ

LS4208-SR20001ZZR

LS4208-SR20007ZC

LS4208-SR20007ZCR

LS4208-SR20007ZZ

LS4208-SR20007ZZR

# RCLS-LS4208: Programming Barcodes for LS4208

Configuration name in Utility : RCLS-LS4208  
Version : 001  
Last Modified : 18-Mar-10  
Windows Filename : RCLS\_LS4208.scncfg  
Plug-in Name : LS4208-COMMON MODELS-S-013



Instructions: Scan barcodes in order, starting with programming barcode 1.

1/8. Defaults



## Cable Connection Settings


USB

2/8. USB Device Type HID Keyboard Emulation



## Symbology Settings

3/8. Enable Codabar, Enable NOTIS Editing

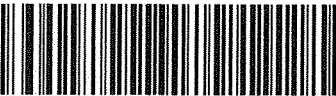

## General Parameter Settings

4/8. Low Power Power Mode, Beeper Volume Low



## Modify Data

5/8. Erase All Rules



6/8. Begin New Rule, 1. Send All that remains, 2. Send Extended Key <Enter>

